


### POINT MEASUREMENT

Place point gauge over the worn point as shown. Note down reading at the tip of the worn point. Estimate value if reading falls between 2 markings.

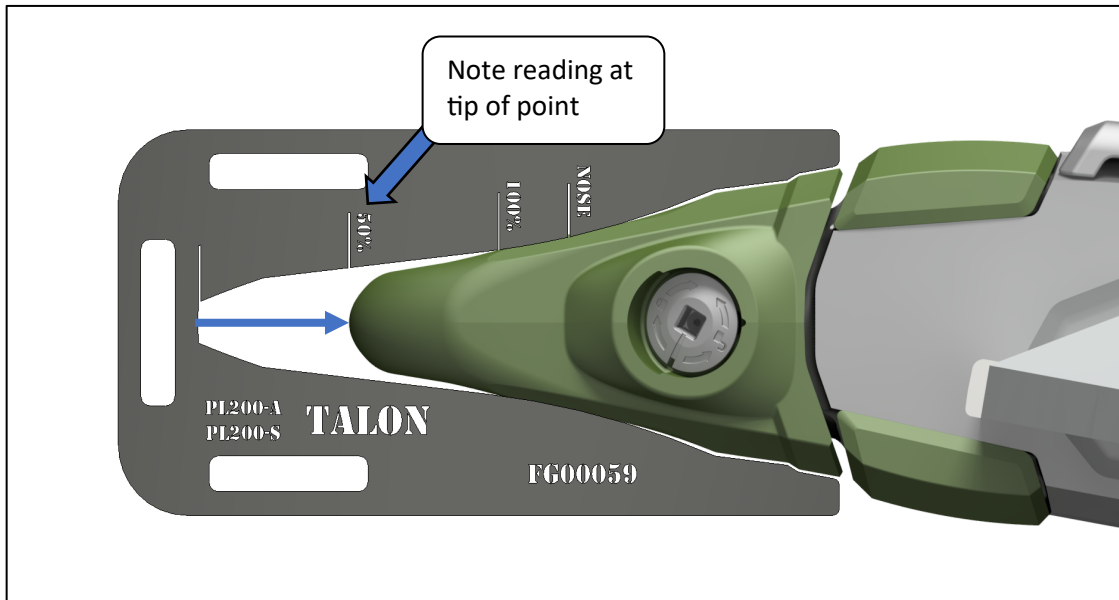

### LIP SHROUD MEASUREMENT

Fix the hook end of the tape measure onto the front of the shroud lock wear protection material. Measure the distance centrally along the shroud from the hook end to the tip of the worn shroud.

