


POINT MEASUREMENT

Place point gauge flat against the top face of the worn point as shown and ensure good contact with the wear cap behind the point. Note down reading at the tip of the worn point. Estimate value if reading falls between 2 markings.

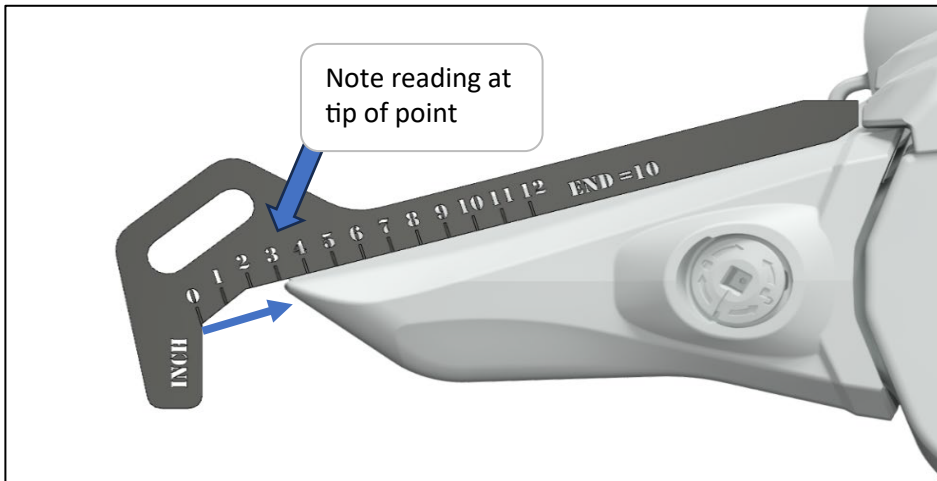

CENTER SHROUD MEASUREMENT

Setup shroud gauge as shown and use the wear caps with the top face of the worn shroud to support the gauge. Place tape measure or ruler against the bracket. Record down reading from shroud to the top of the bracket.

