



## Safety Notice

Working on heavy equipment is dangerous. Please ensure you have considered your workplace safe work procedures and the following key points before commencing any assembly or installation procedures

- Wear correct PPE including:



Full length clothing and work gloves



Safety glasses



Safety work boots




Hearing protection

- Good general housekeeping to ensure the work area is safe and free of clutter
- Use appropriate lifting apparatus to lift heavy items. Please refer to your work place procedures. Lifting points are provided and weights specified on all parts
- Ensure appropriate tags for your work place and work environment are used

Prior to commencing any installation or disassembly, please ensure that the Fitment and Locking Areas are in good condition and free of any fines or debris that could prevent sound fitment or removal.

This procedure will review the assembly of a Lockjaw Shroud. This general procedure may be applied to any Lockjaw product

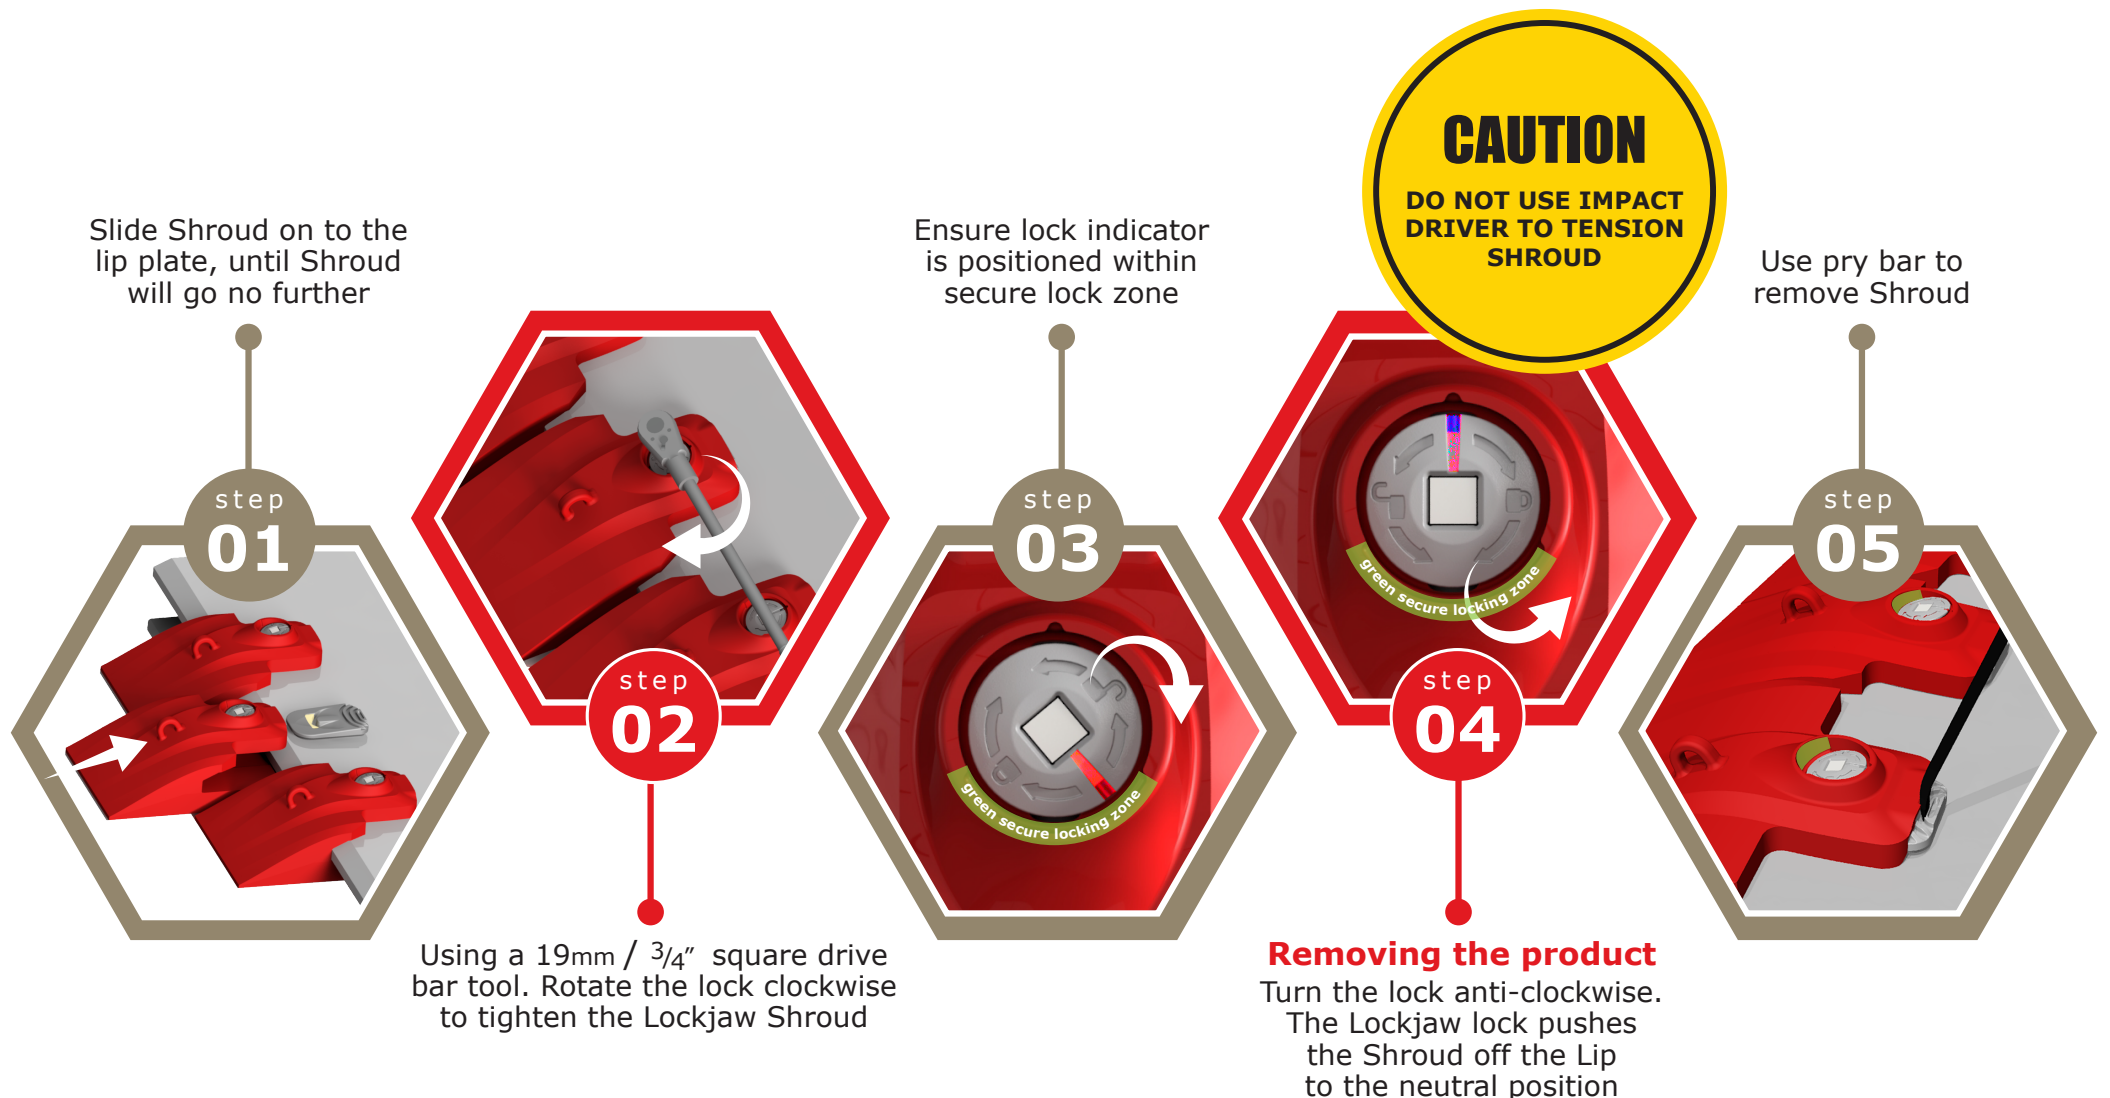

## Lockjaw Basic Removal Instructions



Worn Corner



Wear Indicator Location

Lockjaw wear indicators will break through bottom of the shrouds. Corners should be inspected from underneath as they will not always break through on the side (as per other products in the market). Once wear indicators are visible it is advisable to change worn shrouds at next opportunity to reduce the risk of shrouds peeling off during operation.

**Shrouds and Lip should be well washed with pressure washer to remove any material in and around the lock cavities and boss area for ease of removal**

### Document Version Control

Document Number  
**AP0006**

Version Number  
**3**

Release Date  
**08/08/2022**

